

FLAP VALVE TYPE PTK-B/S

The customer has to check upon delivery the goods supplied by Althon on complete-ness and damage or fracture. If the goods are not complete or damaged the customer has to respond by return and at the latest within 1 week after receipt of goods.

The customer can not claim guarantee, if :

- these installation instructions are not strictly followed
- upon installation the supplied goods the conditions for installation were not in conformance with our installation manual
- a third party has modified the goods supplied

BEFORE INSTALLATION

- Check before installation the smoothness of the concrete pipe inside.
- Moving of the flap valve on site has to be done carefully. Lifting of the flap valve has to be done in a vertical position only.

INSTALLATION

- Fix the supplied neoprene sealing tape over the outside of the tube of the PTK-BS.
- Fix the sealing after the ridges.
- Press the tube of the PTK-BS into the concrete pipe
- Check if the flap valve is positioned completely vertically and start to mount the flap valve.
- No further fixing material needed till flap valve diameter Ø 400 mm. It will be fixed by sealing around our tube into the existing pipe.
- For flap valves as from Ø 500 mm. Mounting the tube to the pipe is depending on the situation. Can be done with anchors from inside the tube. Depending on thickness of the concrete/steel pipe. Or mounted with long anchor rods from flap valve to wall.

PUTTING INTO USE

- Remove all protection applied



INSTALLATION MANUAL WATER CONTROL PRODUCTS

- Check the functioning of the flap valve by opening and closing the door a few times.